BC300 QUICK SETUP GUIDE

NOTE: Consult the Directions For Use included with monitor for complete instructions, troubleshooting, and safety information

MONITOR SETUP



- Open the battery compartment:
 - 1. Install three AAA Batteries
 - **2.** Close cover and secure screw Optional: connect an AC adaptor to extend battery life.



DELAY SETTING

The DELAY switch controls the amount of time (three options: 0, 2 or 4 seconds) between when the patient removes themselves off of the pad and when the monitor alarms.



TONE SETTING

The tone switch allows the caregiver to select between one of three tone options: single beep, double beep or triple beep.



✓ VOLUME SETTING

The VOLUME switch has three different sound levels; HI, LO and SILENT (alarm will be silent when connected into nurse call and set to SILENT).

USE



CORDED PAD CONNECTION

Wrap the sensor pad cord around strain relief, and then connect to the PAD CORD INPUT receptacle on monitor.

NOTE: All corded sensors are identified as OTHER in the SENSORS section of the monitor

NOTE: Corded and cordless pads cannot be used at the same time. When a corded pad is connected, it overrides the cordless pads.



TEST THE ALARM

- When pressure is placed and held back on the pad, the BED, CHAIR or OTHER LED in the SENSORS section, will blink two times and then continuously every three seconds indicating the pad is in use.
- 2. Remove pressure from the pad to activate the audible alarm. The BED, CHAIR or OTHER LED in the SENSORS section, will blink yellow.
- 3. To cancel the alarm, press the monitor's CANCEL/ RESET button or place pressure back on the sensor pad.





MOUNT THE MONITOR

Securely mount the BC300, then connect the AC power cord and plug it into the power receptacle. The BC300 includes two mounting options:

- **1.** A plastic strap to attach it to a wheelchair or side rail .
- 2. A plastic clip to connect it to the included wall bracket.



Also available are a metal wall bracket, bed bracket, and magnetic bracket.





POSITION THE SENSOR PAD on the chair or bed as instructed/illustrated on the pad.



5 NURSE CALL CONNECTION
Plug a nurse call connection ca

Plug a nurse call connection cable into the NURSE CALL jack, connect the opposite end of the cable into the nurse call station (an adaptor may be required) and test.



PAUSE MODE

- While patient is on the pad, press the PAUSE button on the upper left hand corner of the face of the monitor to enter the 60 second pause mode.
- 2. The patient may be removed from the sensor pad within the 60 second window of time without activating an alarm.



TROUBLESHOOTING CHECKLIST 🗸

This checklist has been developed to help identify common issues that can be quickly addressed to prevent unnecessary product returns. Please also refer to the product's Directions for Use. If, after completing the checklist, the product continues to malfunction, please call your Curbell Representative at 888-222-2188.

bell Representative at 888-222-2188.	
e green sensor light does not blink when in use	
Batteries are installed according to the diagram in the battery compartment.	
Batteries are fresh and/or known to be good.	
Under the ALERT section the REPLACE BATTERY LED is flashing red. (Batteries have fully expired and must be replaced with 3 new Energizer Industrial equivalent) batteries).	l (o
set button does not cancel the alarm	
Under the ALERTS section the REPLACE BATTERY LED is flashing red. (Batteries have fully expired and must be replaced with three new Energizer ndustrial (or equivalent) batteries).	
Under the ALERTS section the REPLACE SENSOR LED is Flashing red (sensor has fully expired and needs to be replaced).	
alert is given to the facility's nurse call system	
The connection between the monitor and the nurse call patient station is securely connected and not damaged (a 1/4" mono nurse call jack and/or an adaptor for compatibility is required).	

BC300 ALERT LIGHT INDICATORS

■ "REPLACE BATTERY" LED blinks red and the monitor "chirps"

• Replace all batteries with new Energizer Industrial (or equivalent) batteries.

■ "SIGNAL LOSS" LED flashes yellow

- Make sure that the cord from the sensor pad is securely connected to the monitor
- Make sure that the breakaway cord has been pushed in fully until it clicks.
- If a Nurse Call cable is being used, make sure that the nurse call cable is securely connected to the monitor
- If an AC adapter being used, verify that:
 - \bullet The connection between the monitor and the AC outlet is secure and not damaged.
 - The outlet in use is functioning properly and not controlled by a light switch.

□ REPLACE SENSOR LED is flashing red

• Replace expired timed sensor pad with new Curbell sensor pad.

