


# LOW VOLTAGE CONTROLLER MODES


## FOR THE LVC-2000-007

**IMPORTANT:** Consult the Directions for Use for your low voltage controller for complete installation instructions

### WARNING

This low voltage controller can control up to two loads independently and does NOT have multiple operational modes. The mode select switches shall be set to “0-0-0” by default. Operation with mode select switches in any other setting may warrant unwanted operation.

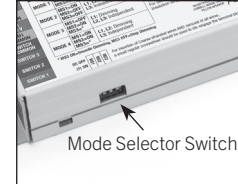

 MS1=OFF (0)  
MS2=OFF (0)  
MS3=OFF (0)

### SWITCH 1 OPERATION

Load 1 defaults to off

- ▶ First SW1 press activates load 1
- ▶ Second SW1 press will deactivate load 1
- ▶ Subsequent SW1 presses will toggle the state of load 1
- ▶ If Load 2 is activated while trying to activate load 1, load 2 will deactivate, wait ½ second and then activate load 1

### SWITCH 2 OPERATION

Load 2 defaults to off

- ▶ First SW2 press activates load 2
- ▶ Second SW2 press will deactivate load 2
- ▶ Subsequent SW2 presses will toggle the state of load 2
- ▶ If Load 1 is activated while trying to activate load 2, load 1 will deactivate, wait ½ second and then activate load 2

### SWITCH 3 OPERATION

Switch 3 and Load 3 are non-functional

### DIMMING

DIM1 and DIM2 are non-functional