


LOW VOLTAGE CONTROLLER WIRING DIAGRAMS

FOR THE LVC-3000-001


IMPORTANT:

- Consult the Directions for Use for your low voltage controller for complete installation instructions

Sequential Control by One SPST Momentary Switch

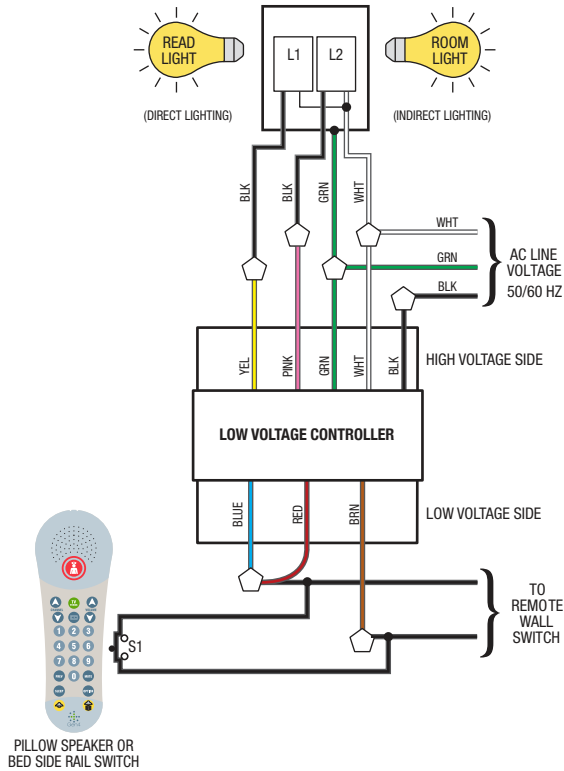

Two SPST Momentary Switches

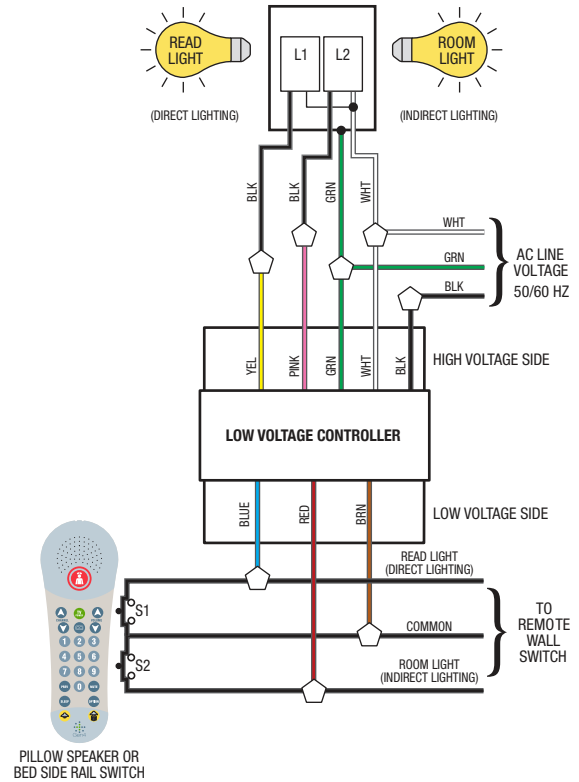

	LOAD 1	LOAD 2
After power up:	Off	Off
1st Switch	On	Off
2nd Switch	Off	On
3rd Switch	On	On
4th Switch	Off	Off

Sequential

HIGH VOLTAGE SIDE	LOAD 1	LOAD 2
Switch 1	Toggle	Unchanged
Switch 2	Unchanged	Toggle

NOTE: Switches will reset to the OFF position if power is interrupted for more than one second.